



A	Top Panel	1
B	Right Side Frame	1
C	Left Side Frame	1
D	Bottom Panel	1
E	Back Panel	1
F	Fixed Shelf	3

Please review the hardware listed on the next page as well as individual components of this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

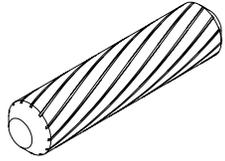

 
**H1 x 20
WOODEN
DOWEL**

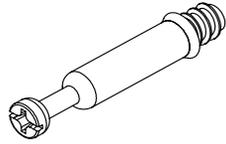


**H2 x 20
CAM
BOLT**




**H3 x 20
CAM**




**H4 x 4
CAM
COVER**

 


**H5 x 27
PAN HEAD
SCREW**

 

**H6 x 1
WALL
ANCHOR**

 

**H7 x 1
FLAT HEAD
SCREW**





 


**H8 x 1
TRUSS HEAD
SCREW**




**H9 x 1
WALL
STRAP**


TOOLS REQUIRED: PHILLIPS SCREWDRIVER | HAMMER

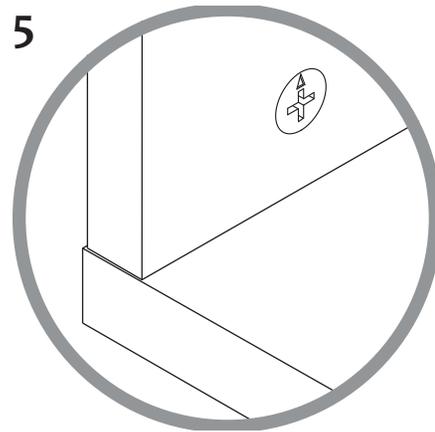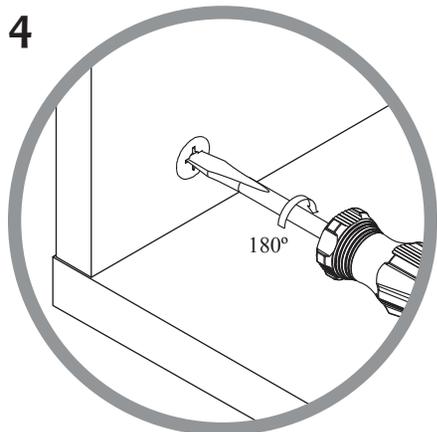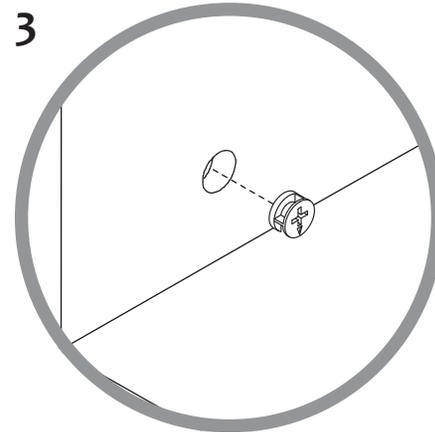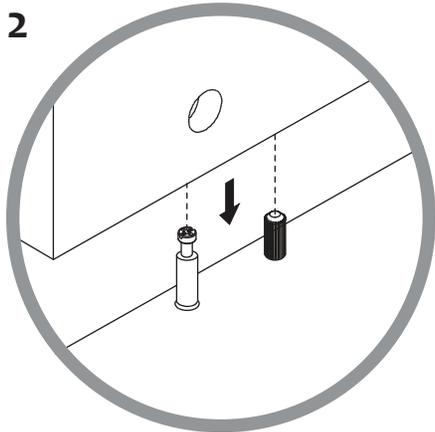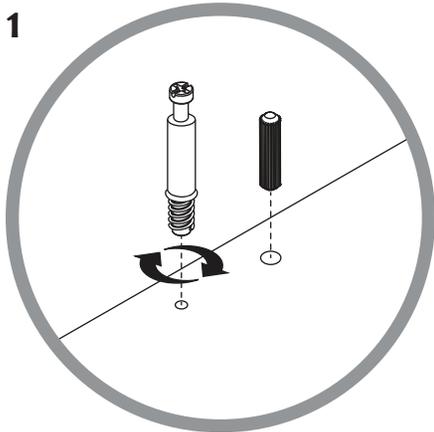

STEP 1

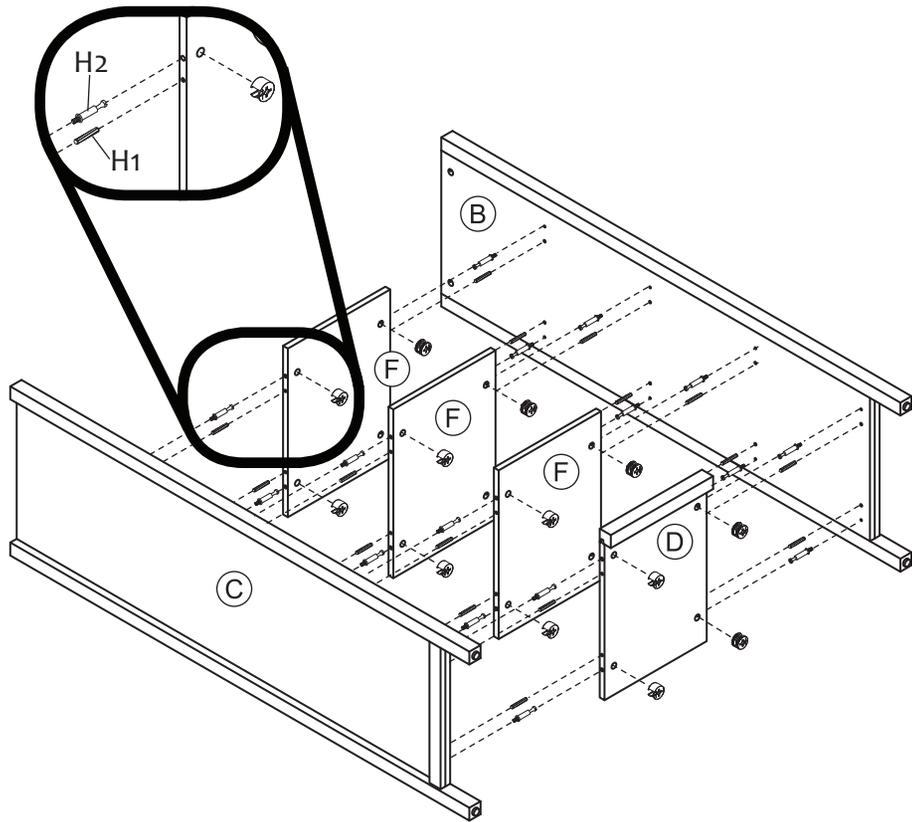

**H1 x 16
WOODEN
DOWEL**


 


**H2 x 16
CAM
BOLT**



**H3 x 16
CAM**

 STEP 2

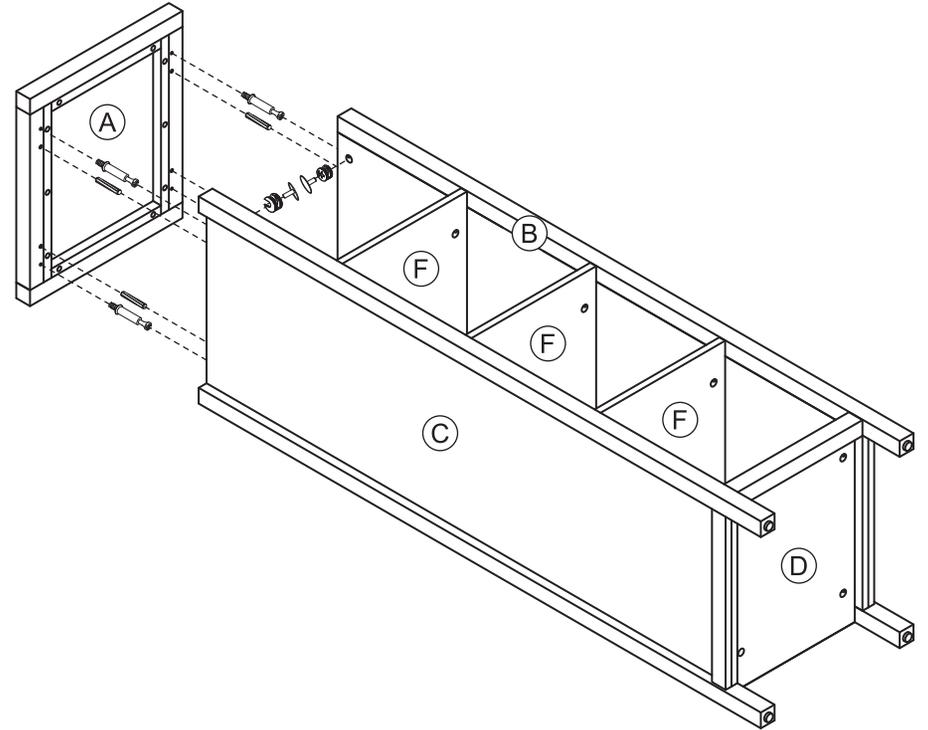

**H1 x 4
WOODEN
DOWEL**



**H2 x 4
CAM
BOLT**

 



**H3 x 4
CAM**





**H4 x 4
CAM
COVER**

STEP 3

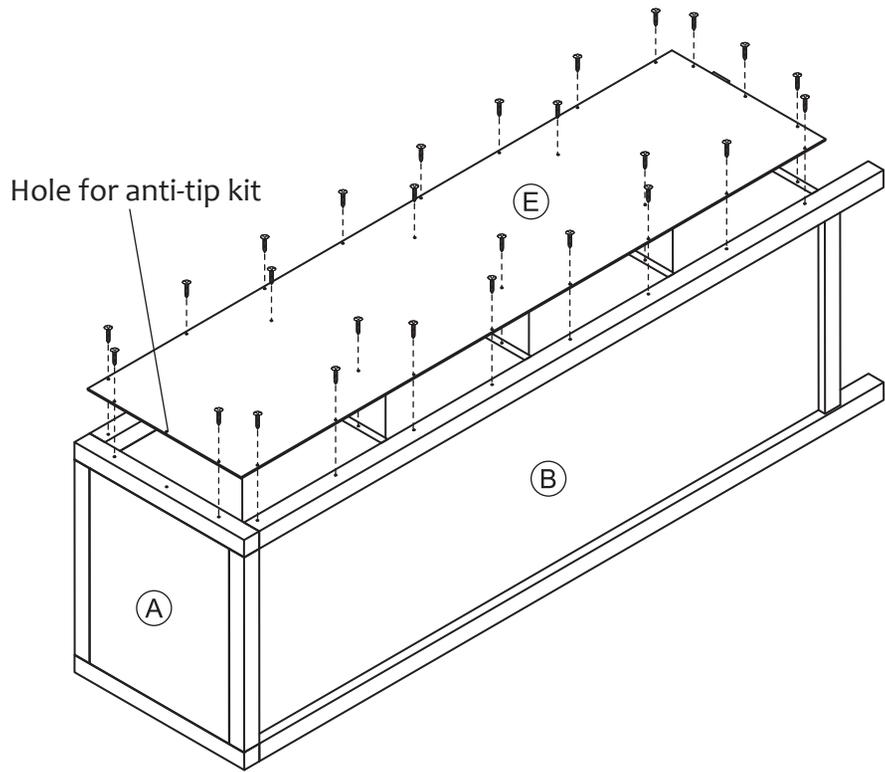


**H5 x 27
PAN HEAD
SCREW**

STEP 4

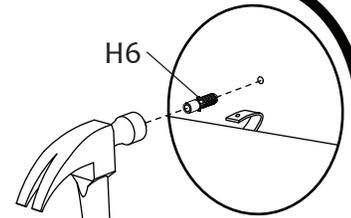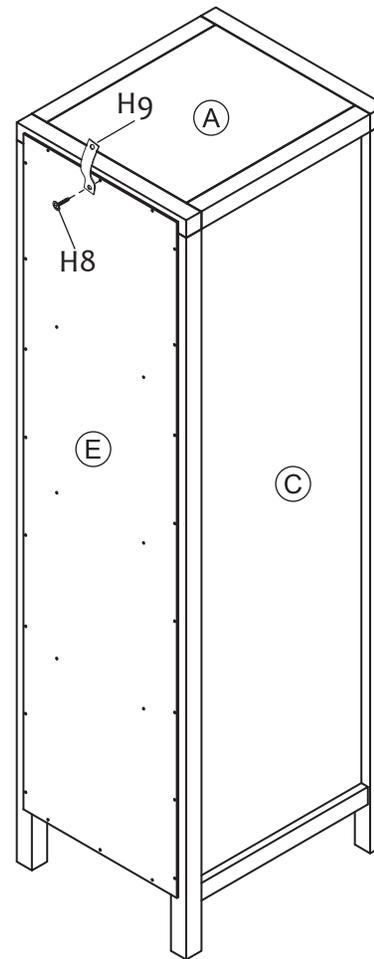


Position against wall
Mark position of strap hole
on wall
Drill 1/4" hole
tap in wall anchor

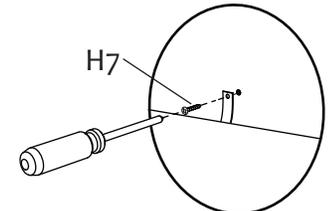

Fasten anti-tip strap with
wall screw provided



 **H6 x 1
WALL
ANCHOR**




**H7 x 1
FLAT HEAD
SCREW**



**H8 x 1
TRUSS HEAD
SCREW**



**H9 x 1
WALL
STRAP**

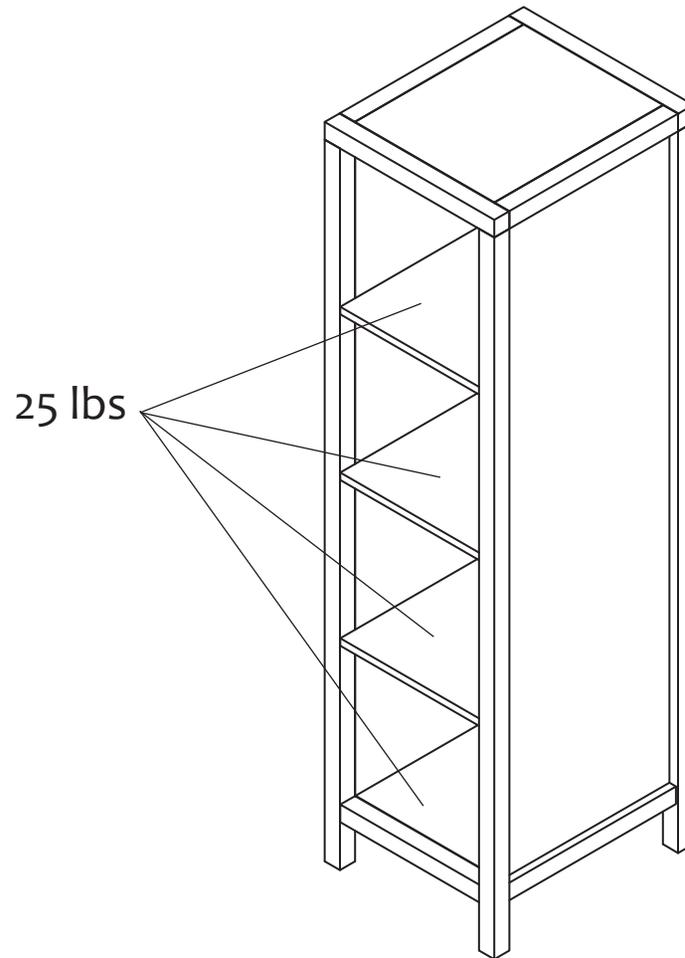

WARNING: Do not exceed the recommended weight limits on the designated panels. Exceeding these limits could cause sagging, possibly resulting in failure of product or bodily injury. Severe injury may occur if furniture tips over. Never allow children to climb or play on this product. Place heaviest items on lower shelves and as far back as possible, never overload product.