


The Container Store[®]

The Original Storage and Organization Store[®]

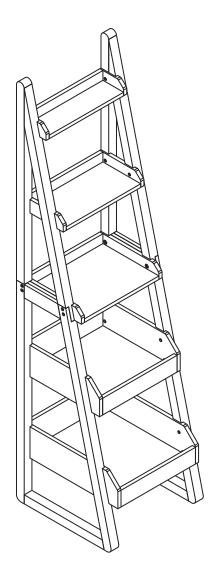


Assembly Instructions Encore Bookcase with Bins

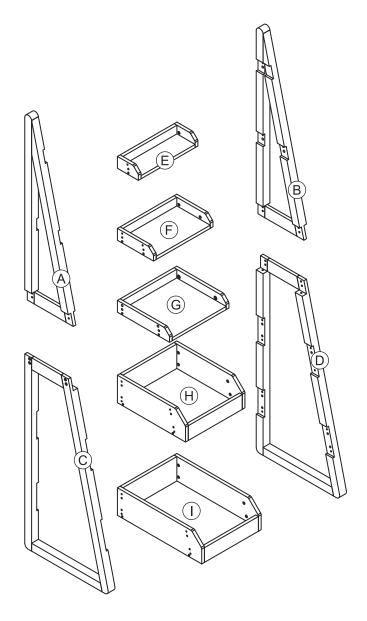

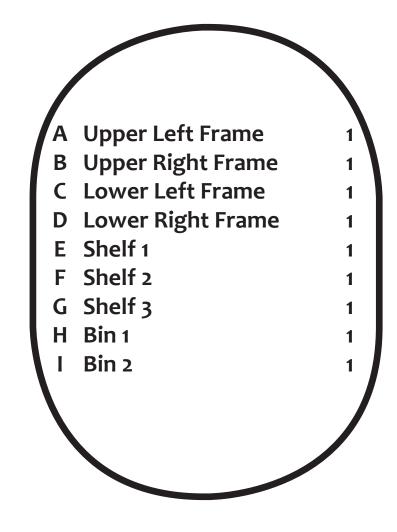



Please review the hardware listed on the next page as well as individual components of this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


PARTS LIST PAGE 2 OF 7

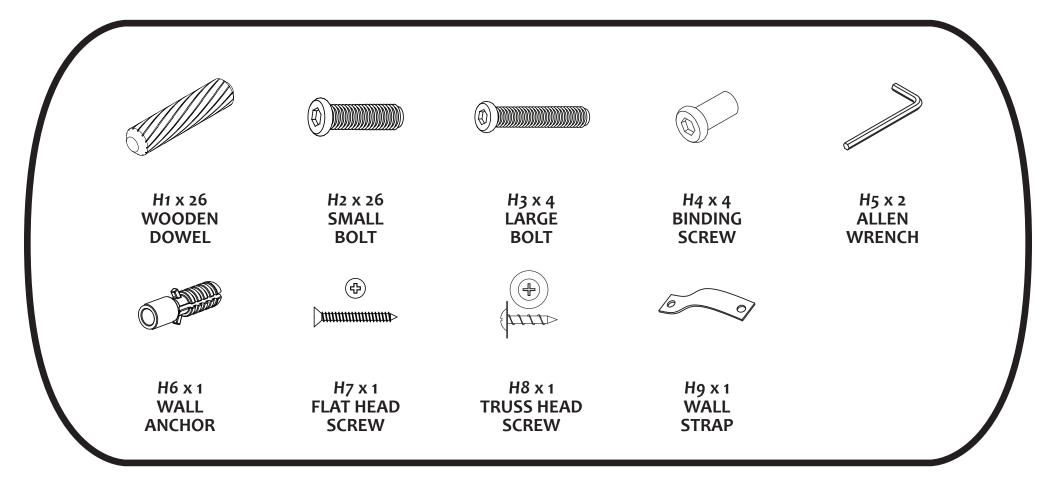

TOOLS REQUIRED: PHILLIPS SCREWDRIVER | HAMMER

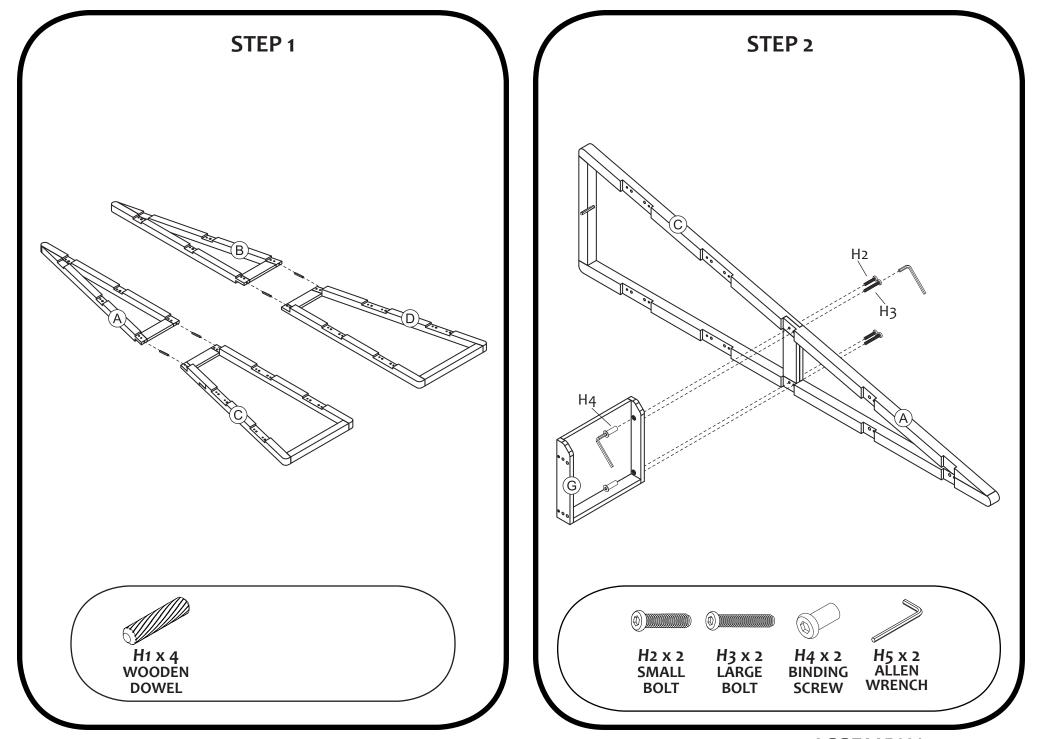


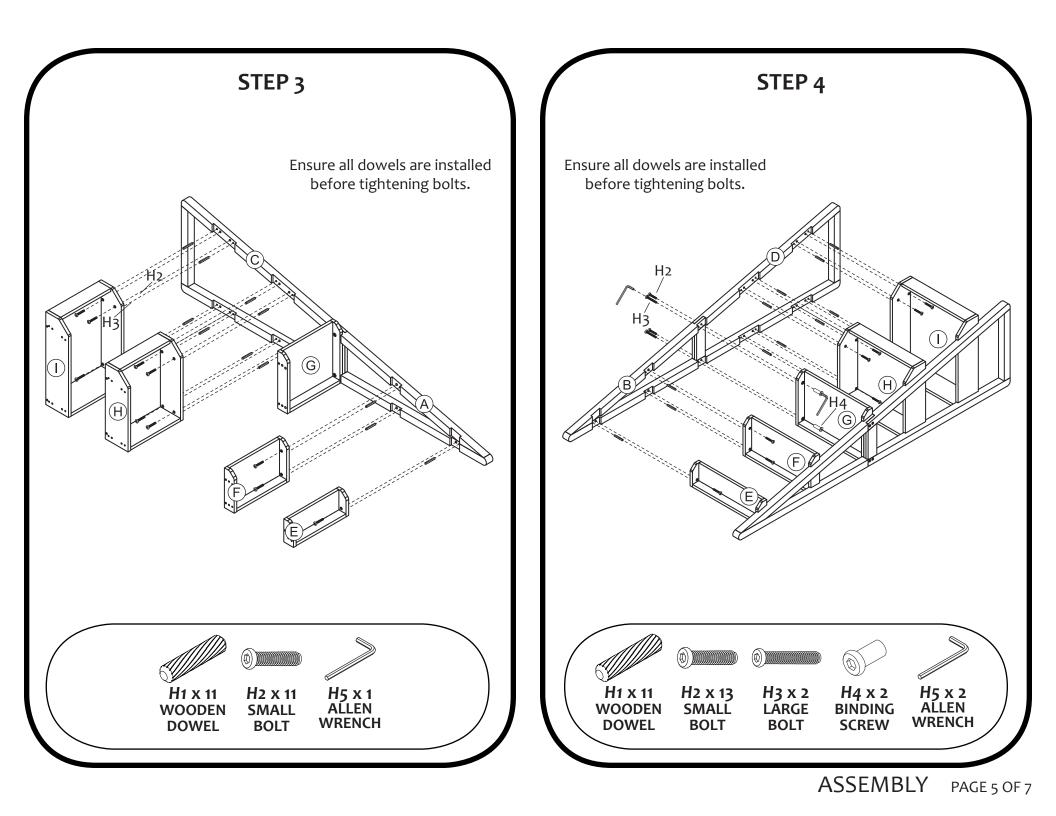

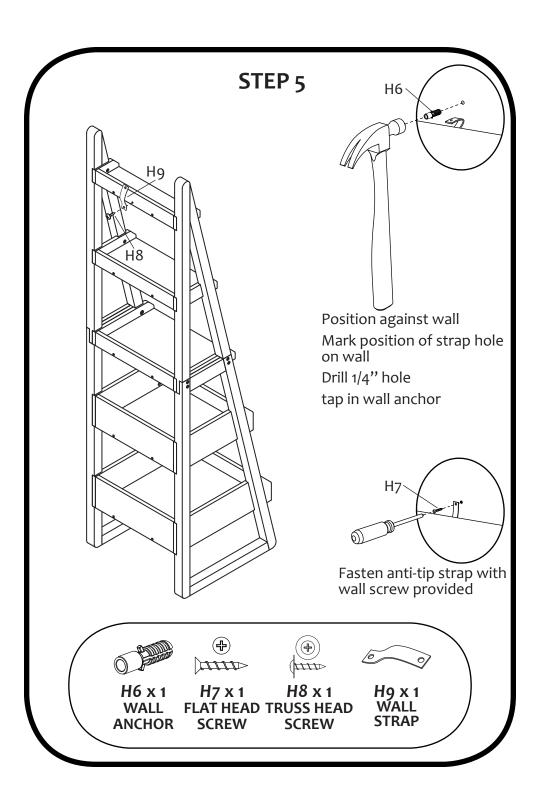

ASSEMBLY PAGE 6 OF 7

The Container Store®

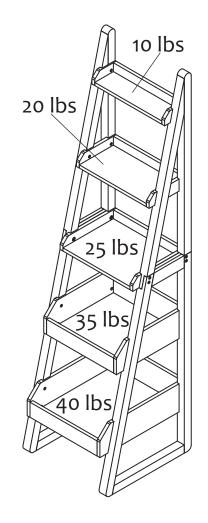

WARNING: Do not exceed the recommended weight limits on the designated panels. Exceeding these limits could cause sagging, possibly resulting in failure of product or bodily injury. Severe injury may occur if furniture tips over. Never allow children to climb or play on this product. Place heaviest items on lower shelves and as far back as possible, never overload product.

The Original Storage and Organization Store®

CARE INSTRUCTIONS PAGE 7 OF 7