



## Slotless Knife Block Care Instructions

### Cleaning the Rods

*It is recommended to hand wash the rod tips in shallow, warm water with mild soap.*

- To remove the rod cartridge, turn the block upside down placing the rod tips on your countertop.
- Slide the knife block shell off.
- Place only the tips of the rod cartridge in a shallow water bath.
- After a few minutes, remove and rinse with warm water.
- Place the rod cartridge—tips down, on a drying rack or towel.
- Allow to air dry overnight.
- Once rods are completely dry, slide cartridge back into your Kapoosh knife block shell.

*\* Rod cartridge may also be cleaned in the dishwasher—top rack only with no heat.*

### Cleaning the Shell

- Wipe the exterior and/or the interior with a damp cloth and mild soap. Rinse with water. Wipe dry with a clean, lint-free cloth.

### Other Care Tips

- Keep away from direct heat.
- Do not overload with too many pieces.
- Do not disassemble knife block shell.
- Do not submerge rod cartridge.

### Product Warranty

ARY, Inc. warrants the enclosed product will be free from defects in materials and workmanship for a period of one year following the purchase of this product. This warranty applies for home use only and does not cover damage caused by misuse or abuse, or consequential damage. The warranty is limited to a refund of the purchase price or replacement of the product. NO OTHER WARRANTIES COME WITH THIS PRODUCT.