


# The Container Store®


## Assembly Instructions Cube & Tall Locker

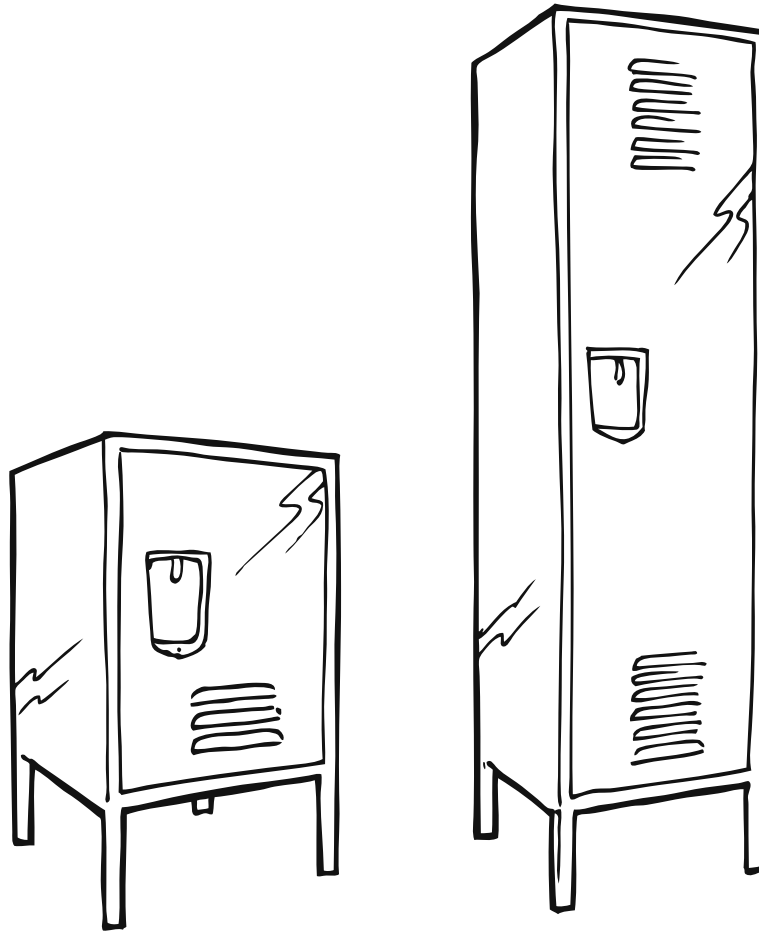




## Cube Locker: Components


Check you have all the bits. No fixtures or fittings required.

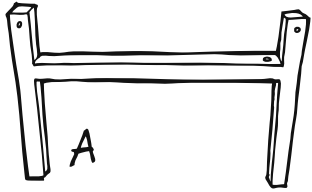

Legs x 2

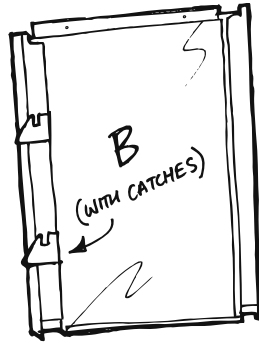


Left Side Panel

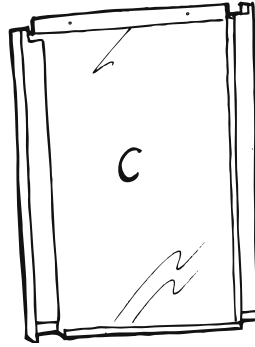


Right Side Panel




Back Panel

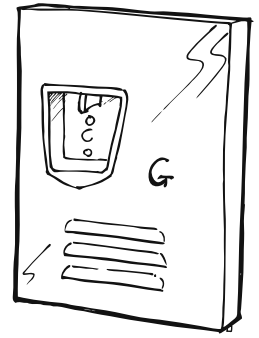

Door

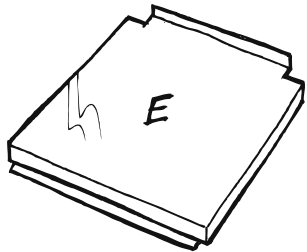

Base

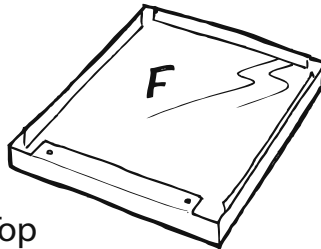

Top

Shelf


You can watch the  
assembly video here.






## Tall Locker : Components


Check you have all the bits. No fixtures or fittings required.

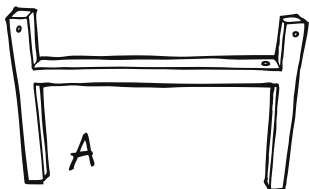

Legs x 2

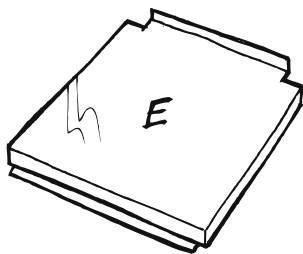


Base

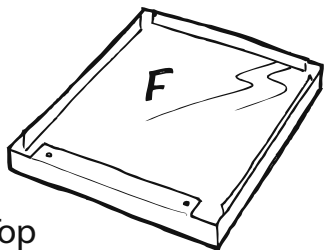


Top


Shelf x 2

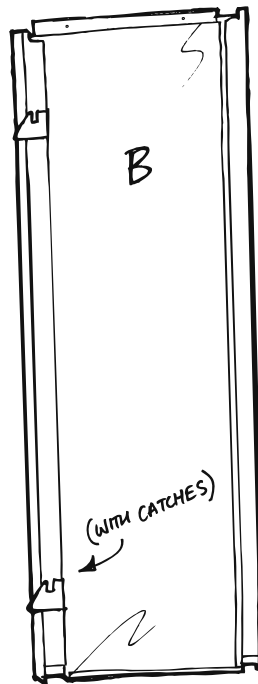


Left Side Panel

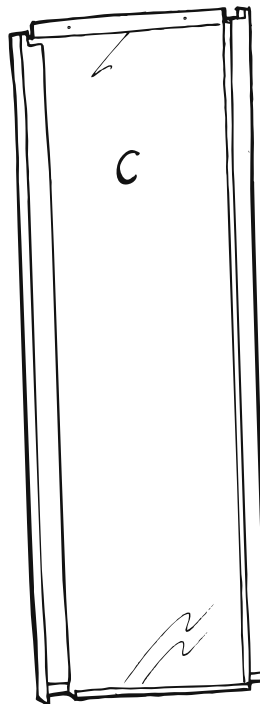

Right Side Panel

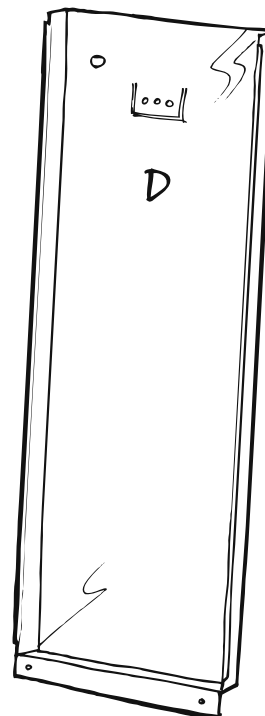

Back Panel

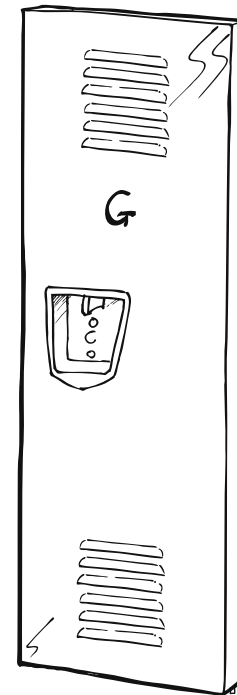

Door

### Please Note:


We recommend fixing the tall locker to a secure wall using the bracket on the back panel.



## Cube Locker: How to build.


### 1 Get the legs.

Make sure the hole for the door pin is on the right hand side of the leg set nearest to you.

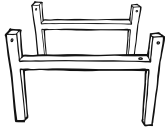


### 2 Put the sides on.

Ensure that the ledge sits at the bottom of both panels, with the catches on panel B facing the front. Ensure the side panels are fully pushed down on to the leg sets.

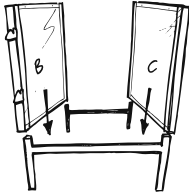


### 3 Slot in the back panel.

Keep the LEDGE at the bottom and insert from the front at a slight angle and push back into position. Ensure lip slots over the leg bar.

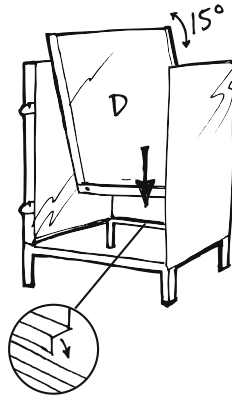


### 4 Drop in the base.

Place in at an ANGLE to avoid the catches, ensuring that lip at the front of the panel tucks under the front leg bar.

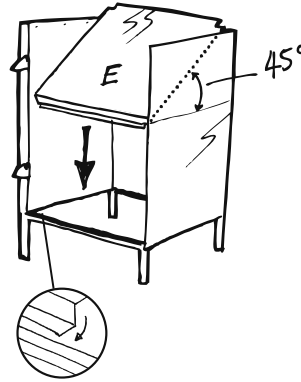


### 5 Pop the top on.

Ensure holes under the lip edge are at the FRONT as the door pin will insert into here. Slide the top on to the front edge, hooking on to the indents, once in place simply lower the back and press down firmly until you hear the top click.

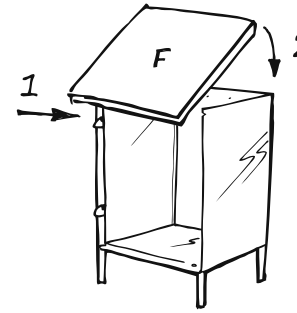

### 6 Attach the door.

Carefully lower the door into place inserting the pin into the hole provided. Lift the door into position, pull down the top pin and let it click into the top hole. Simple!

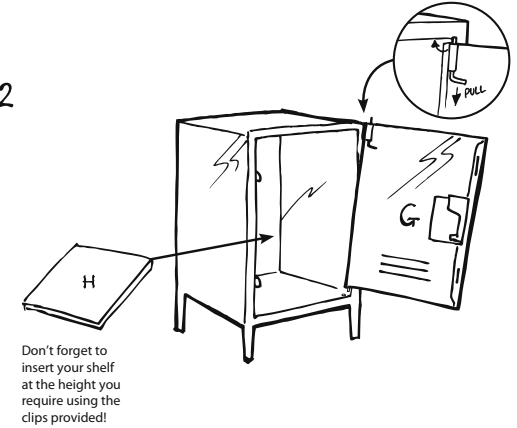


Don't forget to insert your shelf at the height you require using the clips provided!



## Tall Locker : How to build.


### 1 Get the legs.

Make sure the pin for the door is at the right hand side of the leg set nearest to you.

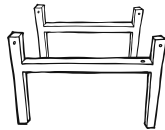


### 2 Put the sides on.

Ensure that the ledge sits at the bottom of both panels, with the catches on panel B facing the front. Ensure the side panels are fully pushed down on to the leg sets.

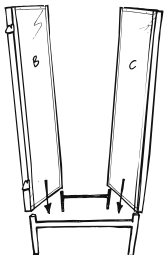


### 3 Slot in the back panel.

Keep the LEDGE at the bottom and insert from the front at a slight angle and push back into position. Ensure lip slots over the leg bar.

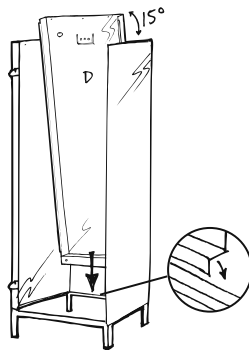


### 4 Drop in the base.

Place in at an ANGLE to avoid the catches, ensuring that lip at the front of the panel tucks under the front leg bar.

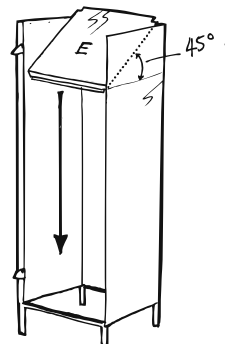


### 5 Pop the top on.

Ensure holes under the lip edge are at the FRONT as the door pin will insert into here. Slide the top on to the front edge, hooking on to the indents, once in place simply lower the back and press down firmly until you hear the top click.

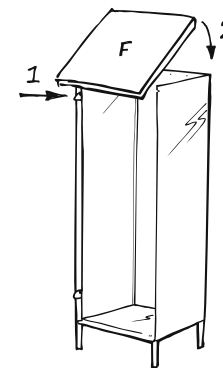

### 6 Attach the door.

Carefully lower the door into place inserting the pin into the hole provided. Lift the door into position, pull down the top pin and let it click into the top hole. Simple!

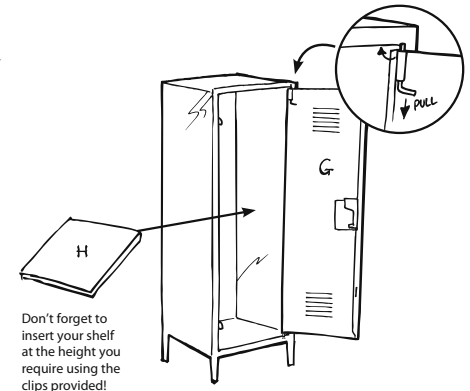

Don't forget to insert your shelf at the height you require using the clips provided!



If you have any problems with assembly please visit [www.myfunkyshop.com/assembly](http://www.myfunkyshop.com/assembly)