

Urbio product line:



Shorty



Big Daddy



Wide Mouth




String Bean



Wall Plate


How to install the urbio wall plate:

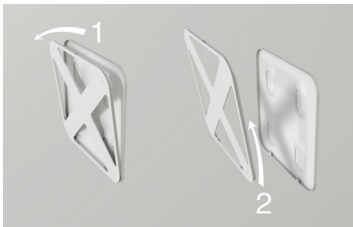

1. Locate tab on bracket, apply downward force, pull out, and lift up to separate bracket from wall plate.



2. If you are installing multiple rows of wall plates, start with the bottom row first. Metal plates must be mounted to the brackets before moving up a row.

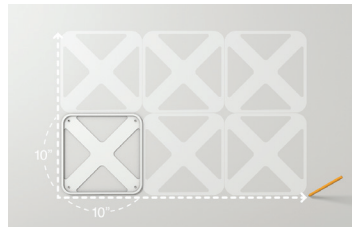


3. Using the bracket as your guide, take a pencil and ruler or level and lightly outline the area where you want to mount your wall plate(s). Each wall plate is 10" x 10".



4. Mark in the holes located in the four corners of the bracket. Remove bracket.




5. To ensure accurate alignment, using a ¼ inch drill bit, slowly drill a hole in the top left mark for the wall anchor.

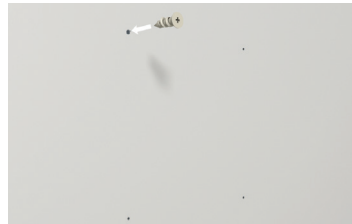

6. Install one wall anchor in the top left drill hole.




7. Replace bracket over the wall anchor, making sure the pencil marks are lined up in the holes and install screw.

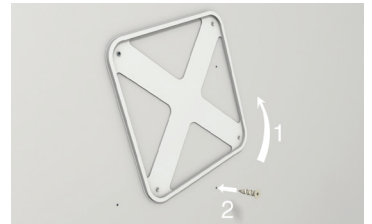

8. Tilt bracket and repeat steps 5 & 6 for the bottom right mark.



9. Repeat step 7. Install the remaining two screws (without wall anchors).

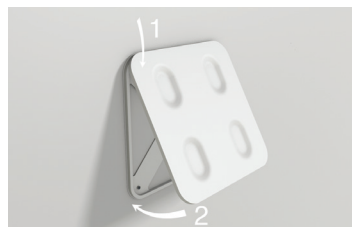

10. Attach wall plate to the installed bracket by hooking the tabs located on the top of the wall plate into the slots located on the top of the bracket and snapping down into place.



11. If you wish to install additional wall plates on the same level, closely line up the edge of the plastic bracket with the adjacent wall plate and repeat steps 2-10.