
STYLE STATION™ PRO

Wall-Mounting Instructions

- 1. Tape the template (see page 2) to the wall in the desired hanging location. Be sure template is level.
- 2. Mark the position of the drill holes (\(\precedit\)). Use 1/4" drill bit.
- 3. Drill pilot holes. If you are mounting on drywall or plasterboard the holes should accommodate the anchors.
- 4. Remove template from the wall and insert anchors into the holes.

GENERAL PURPOSE WALL ANCHOR

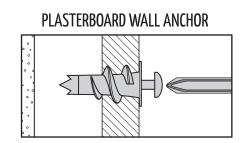

- 5. Using at least 2" long screws, insert leaving about 1" protruding from the wall.
- 6. Place the Style Station™ PRO on the screws, being sure to register the outermost sections of the cord wraps over the screws (as shown in the template).

