



6739-7053 36 Pair Over The Door Gunmetal Shoe Rack




A 12 ea
Shoe shelf




B 1 ea
Top left side frame




C 1 ea
Top right side frame

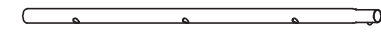

D 4 ea
Vertical middle frame tube

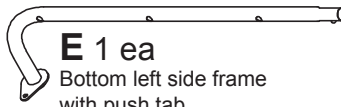

E 1 ea
Bottom left side frame
with push tab

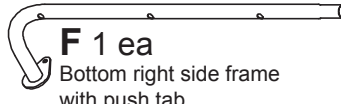

F 1 ea
Bottom right side frame
with push tab



G 2 ea
Over the door
bracket



H 2 ea
Under the door
bracket



I 24 ea
Long hex screw



J 4 ea
Protective pad



K 1 ea
Hex wrench



L 4 ea
Wall screw




M 4 ea
Wall anchor

Assembly Time:
Less than
30 minutes.

This product's intended use is for shoe storage.

Tools Needed: No extra tools required.
(For wall mounting see note below)

STEP 1. Slide an over the door bracket (G) onto a top left side frame (B). Repeat for the other bracket and top right side frame (C).

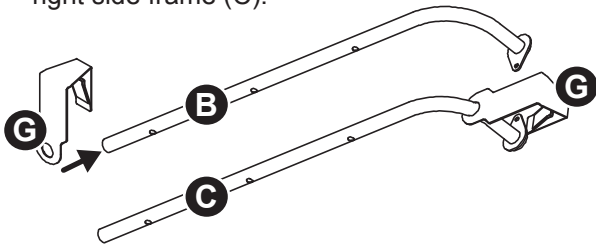

STEP 2. Attach the shoe shelf (A) to the side frames (B & C) using long hex screws (I). Following the diagram, repeat for each section. After the top, middle, and bottom sections are built, insert the sections together until clipped. Attach the protective pads (J) onto the ends of (B, C, E & F) and hang your shoe rack over an interior door. Install the two under the door brackets (H) onto the ends of (E & F).

NOTE: This shoe rack is wall mountable by omitting over the door brackets (G) and using wall anchors (M) and wall screws (L). A drill and bit may be needed to provide a hole for the wall anchor (M). A screwdriver will be needed for wall screw (L).

NOTE: Make sure the shelf sections are attached with the high side facing front and angled down toward the back.

