


## Table of Contents

|                                  |   |
|----------------------------------|---|
| What's in the Box                | 1 |
| Securing the Rails to the Wall   | 2 |
| Prep Partitions                  | 2 |
| Place Fixed Shelves              | 4 |
| Plumb and Level the System       | 4 |
| Attaching the System to the Wall | 4 |
| Wedge Cleat and Hanging Rods     | 5 |
| Additional Cleat Supports        | 5 |
| Configuration Options            | 7 |

## THREE SECTION Double-Hang Closet





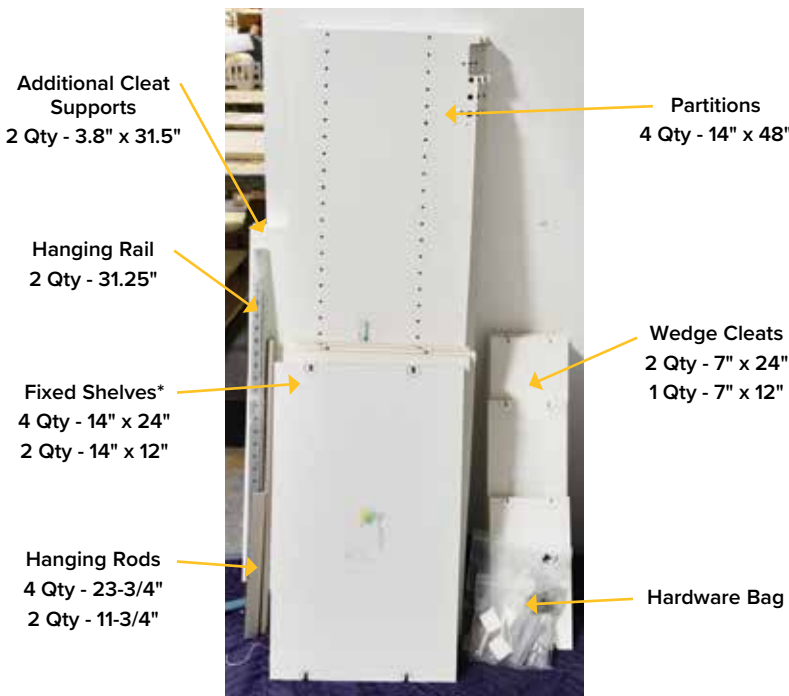






## What's In The Box



- ⑩ Suspension Brackets (right and left) 2 of each 
- ⑪ Corner Brackets 4 needed, 1 extra 
- ⑫ Rod Cups 12 needed, no extra 

### INCLUDED IN HARDWARE BAG

- ① 2½" Wood Screws 8 needed, 2 extra 
- ② Toggle Anchors 8 needed, 2 extra 
- ③ Toggle Bolts 8 needed, 2 extra 
- ④ Single Push-In Dowels 20 needed, 2 extra 
- ⑤ Pan Head Screw 8 needed, 2 extra 
- ⑥ Bracket Screw 4 needed, 2 extra 
- ⑦ Double Dowel 12 needed, 2 extra 
- ⑧ Cams (already inserted in shelving) 
- ⑨ Zip-It Anchors 4 needed, 1 extra 

*\*NOTE: All shelves are "fixed" once locked in the position you select.*

Ensure all items are accounted for. If any items are missing, please call Customer Service at **1-888-CONTAIN (266-8246)** and report damaged or missing items.

**ADDITIONAL TOOLS NEEDED** (not included) – Protective covering for the floor, #2 Phillips Screwdriver, Level, Tape Measure, Pencil, Countersink Tool (optional), Drill and the following Drill Bits: 1/2" Spade, #2 Phillips, 1/2" Concrete (optional)

Limited 1-Year Warranty. For warranty details, visit [www.containerstore.com/help/index.html](http://www.containerstore.com/help/index.html)

Even easier to assemble with **BILT®** 3D Instructions. Download today.



SCAN FOR BILT.

# WOOD Closet System Installation Instructions

## DETERMINE PLACEMENT

We recommend installing the center point (where the mounting holes are) of the Hanging Rails 81-3/4" above finished floor. This will put the top of your finished solution at the recommended height of 84". If you wish to adjust the preferred height, the center point of the Hanging Rails will be installed 2-1/4" below the top of the preferred height of your solution.

**NOTE: When installing the Rails, ensure the lip of each Rail is on the top and facing out from the wall. The combined Rails will measure 1/2" shorter than the length of your solution.**

## Step 1 – Securing the Rails to the Wall

Using a stud finder, mark the location of the studs at the height you plan to install the Rails.

**NOTE: Tying into every wood stud is strongly recommended, especially where Partitions hang. If there is no stud within 4" of either side of a Partition, you must use the Toggle Anchors (#2). You must secure each Rail to at least one wood stud.**



**NOTE: If you have metal studs, you must install 4 Toggle Anchors per rail, starting 2 holes in from the end. The other 2 Toggle Anchors should be within 4" of desired Partition locations.**

Position the Rails at the desired height and using a level, mark the anchor holes and stud holes. Be sure that both Rails are in perfect alignment with each other.

Using a 1/2" bit, drill holes for the Toggle Anchors where needed. Hold metal bar flat alongside plastic straps and slide through the hole. Pull plastic straps toward you until metal bar rests flat behind the wall. Ratchet cap along straps with other hand until flange of cap is flush with wall. Snap off straps level with flange of cap.

Position the Rails on wall and use a minimum of 1, 2-1/2" Wood Screw (#1) per Rail to secure Rails to wood studs, or 4 Toggle Anchors as noted above.


Secure Toggle Bolts (#3) into anchors.

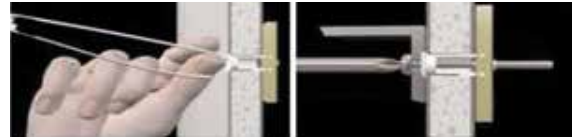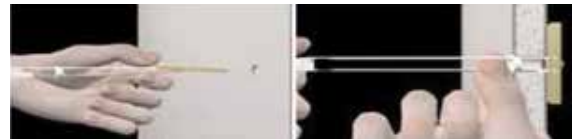

## Step 2 – Prep Partitions

Line up each Corner Bracket (#11) so it's flush with the bottom back edge of the Partition. Using a Pan Head Screw (#5), secure the Corner Bracket to the Partition using a drill and #2 Phillips bit.

**NOTE: Leave flap open.**

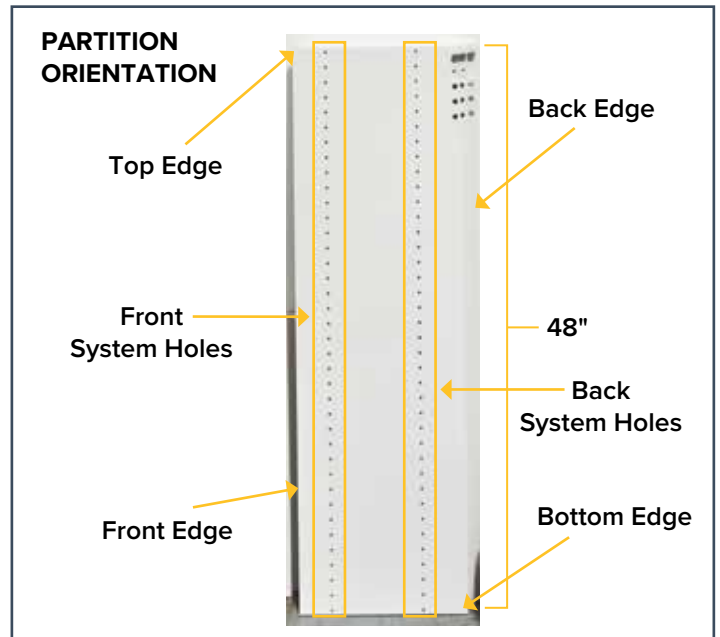

## Attaching Suspension Brackets

Find the small divot below the 3 Suspension Bracket holes. Align the Suspension Bracket (#10) so the hook end faces the back edge of the Partition as shown in photo. Attach the Suspension Bracket to the Partition using a Bracket Screw (#6). The Bracket Screw will go in at an angle into the divot hole.



Orientation



## Inserting Dowels

Insert 6 Single Push-In Dowels (#4) into each Partition. Four of these will be used to secure your Fixed Shelves. Place 1 Single Push-In Dowel in the uppermost Front System Hole and 1 Single Push-In Dowel at the uppermost Back System Hole.

**NOTE: All Dowels will be on the same side as the Suspension Brackets on each Partition. The 2 remaining Push-In Dowels will be inserted into the two, pre-drilled holes directly in front of each Suspension Bracket.**

**NOTE: 5 holes up is the lowest the shelf can be placed.**

**NOTE: Single Push-In Dowels (#4) are used with the 2 Partitions that will be hung on the outer edges. The Double Dowels (#7) are used for the 2 Partitions hung in the middle (1 left and 1 right Partition placed in the center).**

Push the Double Dowel (#7) in until the shoulder of the dowel is next to the Partition. All Double Dowels should be inserted from the same side.

**NOTE: Double Dowels are only used when Fixed Shelves or Wedge Cleats share the same system hole. When Fixed Shelves do not share the same system hole, Single Push-in Dowels (#4) will be used.**



Dowel Holes in front of Suspension Brackets (#10)




Double Dowels (#7) inserted in Partition

## Hanging Partitions

Align each Partition so Rail falls inside notch in Partition. Slightly lift to hook Suspension Bracket behind the lip of the Rail. The Suspension Brackets will be on the inside of your solution. Ensure middle Partitions with Double Dowels are in the middle.

**NOTE: Sections can be arranged in any order, i.e. the 24" sections can be placed next to each other with the 12" section on either end.**

**NOTE: You may need to loosen the top adjustment screw in the Suspension Brackets to properly hang the Partitions on the Rail.**

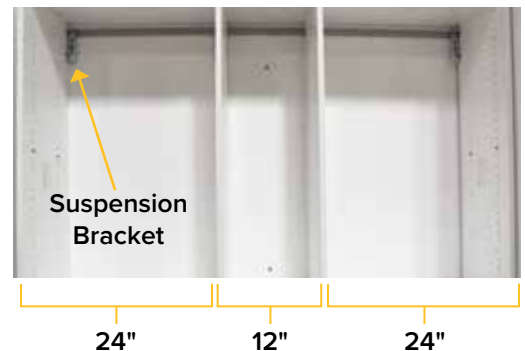

# WOOD Closet System Installation Instructions

## Step 3 – Place Fixed Shelves


Position Partitions 24" apart for each of the larger sections and 12" apart for the smaller section. Sections can be arranged in any order. Position the Top Shelf so that the Cams (#8) are aligned with Dowels. Push Shelf down lightly so Dowels insert into Cams. Use a #2 Phillips screwdriver to lock Cam by turning clockwise to tighten.



Attach the bottom Fixed Shelves at desired position the same way as the top Fixed Shelves.



Cams are pre-inserted into shelving

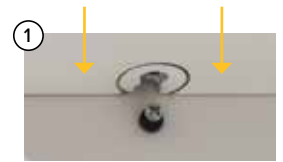

Position Cam over Dowel.



Use screwdriver to lock Cam by turning to the right.

## Step 4 – Plumb and Level the System

Adjust the screws in the Suspension Brackets (#10) to level and plumb your system. Place a level on top of the system to check levelness. Hold the level on the outer side of the system to check for plumb.

**NOTE: Depending on the wall conditions, there may be some visible gapping between the Partitions and the wall, which is often to be expected and should not impact the structural integrity of the system.**

Top Screw:  
adjusts in and out

Bottom Screw:  
adjusts up and down



## Step 5 – Attaching the System to the Wall

Screw in the bottom Corner Brackets (#11) of the system to the wall using Zip-It Anchors (#9).

Tighten the Suspension Brackets to the wall by tightening the top adjustment screw. Do not overtighten.



Once secure, close the covers to hide the hardware



## Step 6 – Wedge Cleat and Hanging Rods

Position Wedge Cleat (Cams facing wall) directly below top shelf as shown, and push firmly into place over the 4 remaining Dowels.



Cams attach to the back of the system.



Wedge Cleat

Rod Cup

Insert Rod Cups (#12) replace in Front System Holes on each Partition at desired height.

Place Hanging Rods into Rod Cups.



Rod in Rod Cups

## Step 7 – Additional Cleat Supports

2 additional pieces of Cleat material will be provided at a length of 31.5". These pieces can be added to the bottom of the closet, as shown below, and used to provide additional support. If the Corner Brackets are attached at the bottom of the system, they will need to be removed prior to the next step.

Remove Corner Brackets, Rods, and Rod Cups



**NOTE:** You will need to install additional Cleat Supports any time you use Add-On Kit(s) to create a configuration with shelving installed in System Holes at the same level across at least 2 sections. See page 8 for additional configuration examples.

# WOOD Closet System Installation Instructions

## Step 7 – Additional Cleat Supports *continued*

Measure where studs are on the wall and mark on Cleat pieces.



Attach the Cleats to the wall using 2½" Wood Screws (#1) if there are studs. If there are no studs, use Toggle Bolts (#3) and Toggle Anchors (#2), as shown. If desired, use a countersink tool prior to attachment for a flush appearance.



Reattach plastic Corner Brackets (#11) using Pan Head Screws (#5) and place right underneath Partitions.



## Configuration Options

**NOTE: Double Dowels (#7) must be used any time there are shelves at the same height across 2 or more sections.**

### Adding Shelves from Add-On Shelf Kits

Install the Fixed Shelf as shown on page 4.

Insert Shelf Pins in the Front and Back System holes, at the same height, on each Partition. Adjust the Shelf Pins so the flat sides are up to support the adjustable shelf. Place the Adjustable Shelf on top of the Shelf Pins and ensure it is flush against the wall.




Adjustable Shelf Pins




### ① Three Double-Hang Sections

1 Quantity of Kit 2 - Three Section Double-Hang Closet  
Use Cleat Supports if configured as shown.

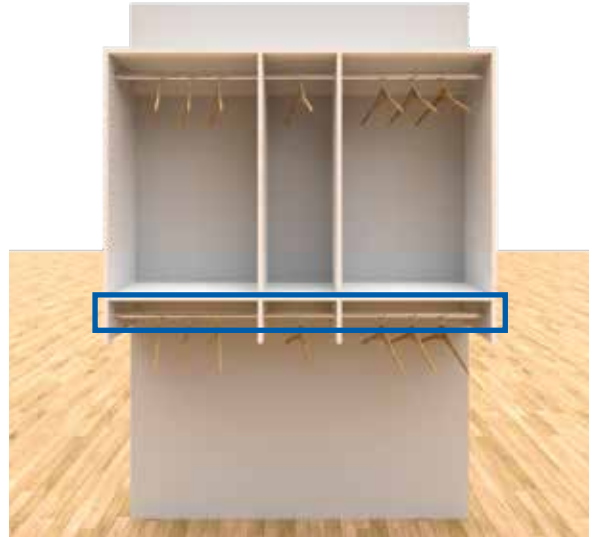

### ② Two Double-Hang Sections and One 12" Shelf Stack


1 Quantity of Kit 2 - Three Section Double-Hang Closet  
1 Quantity of Kit 3 - 12" Fixed and Adjustable Shelves

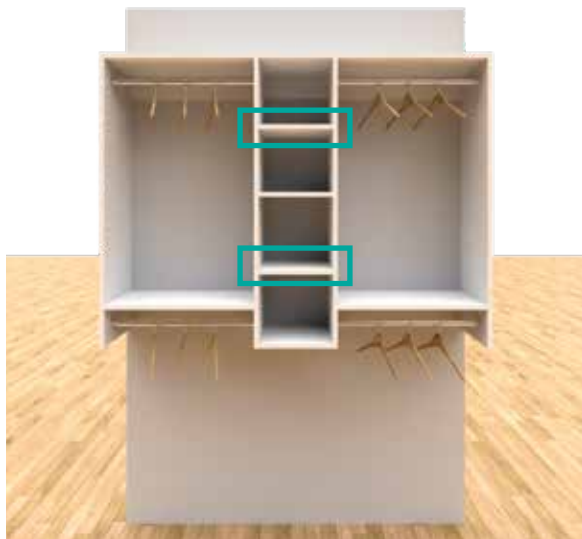

Green boxes indicate Adjustable Shelves.  
Unmarked Shelves are fixed.

### ③ One Double-Hang Section, One 12" Shelf Stack, and One Long Hang


1 Quantity of Kit 2 - Three Section Double-Hang Closet  
1 Quantity of Kit 3 - 12" Fixed and Adjustable Shelves

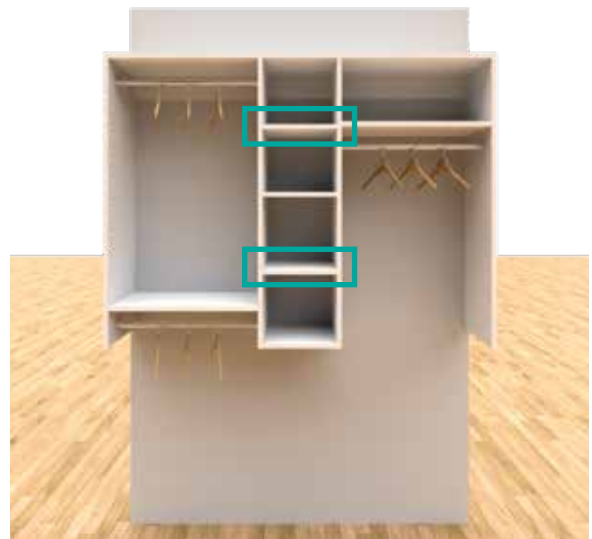


Blue boxes indicate Additional Cleat Supports.

Configuration Options *continued*


- ④ **One Double-Hang Section, One 12" Long-Hang Section, One Mid-Hang Section with 24" Shelves**  
 1 Quantity of Kit 2 - Three Section Double-Hang Closet  
 1 Quantity of Kit 4 - 24" Fixed and Adjustable Shelves

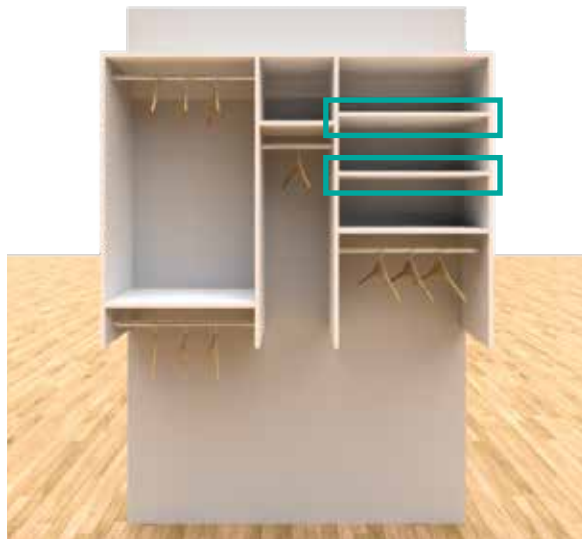

- ⑤ **One 24" Double-Hang Section, One 24" Long-Hang Section with Shelf, One 12" Shelf Stack**  
 1 Quantity of Kit 2 - Three Section Double-Hang Closet  
 1 Quantity of Kit 4 - 24" Fixed and Adjustable Shelves (if desired)

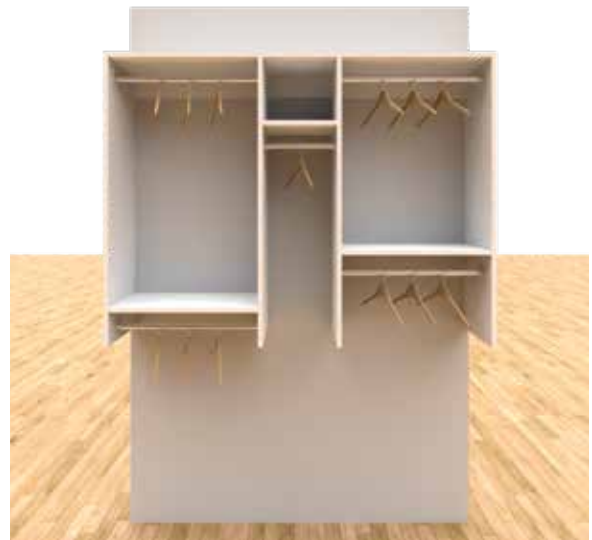


- ⑥ **Three Section Short Hang with Fixed and Adjustable Shelves**  
 1 Quantity of Kit 2 - Three Section Double-Hang Closet  
 1 Quantity of Kit 3 - 12" Fixed and Adjustable Shelves  
 2 Quantity of Kit 4 - 24" Fixed and Adjustable Shelves  
**Must use additional Cleat supports.**

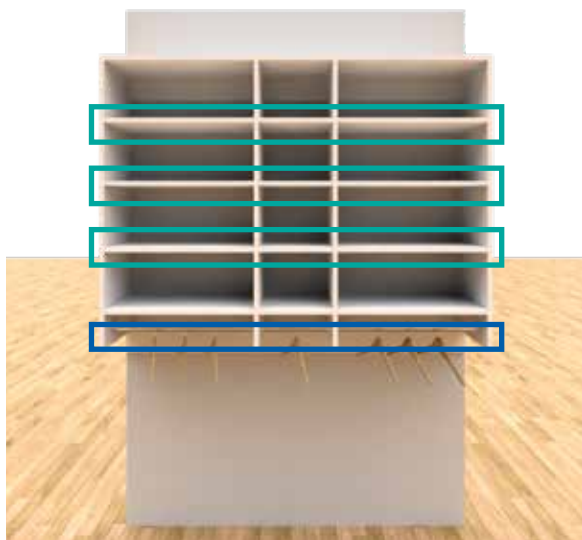

Green boxes indicate Adjustable Shelves.  
 Unmarked Shelves are fixed.

- ⑦ **Three Section Fixed and Adjustable Shelves**  
 1 Quantity of Kit 2 - Three Section Double-Hang Closet  
 1 Quantity of Kit 3 - 12" Fixed and Adjustable Shelves  
 2 Quantity of Kit 4 - 24" Fixed and Adjustable Shelves  
**Must use additional Cleat supports.**

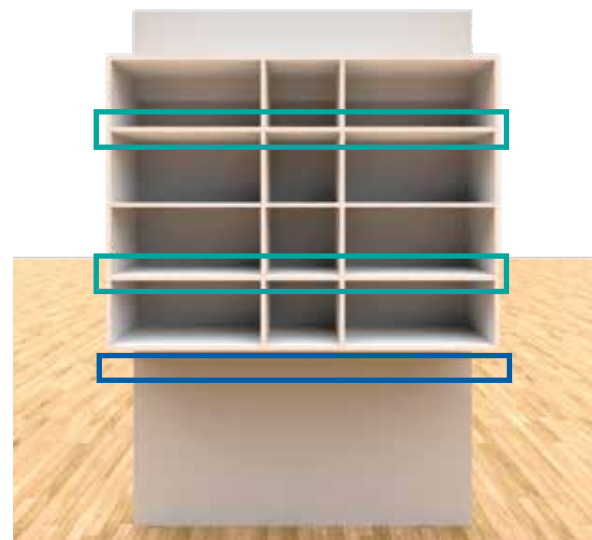

Blue boxes indicate Additional Cleat Supports.