


# Assembling Instruction

Item No. 10075059/10075061








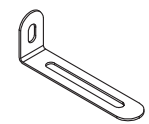


Attention: Do not tighten the screws until all of them are in right positions

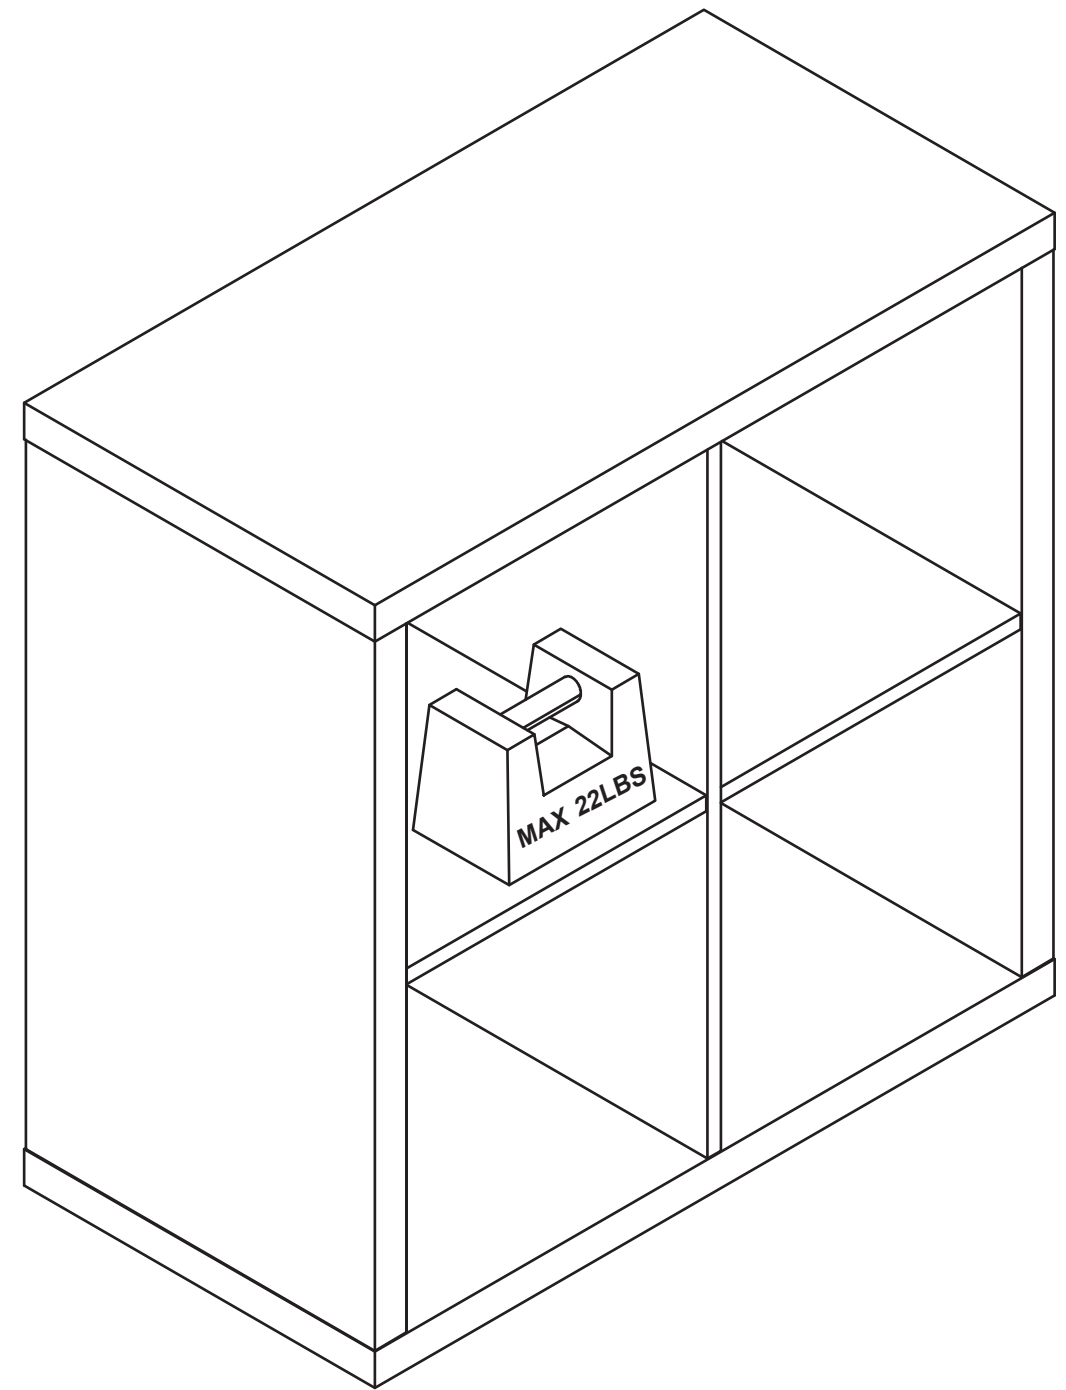


## AFTER SALES SUPPORT

 <sup>USA</sup> 888-965-8169

 [acs@americancustomerservice.com](mailto:acs@americancustomerservice.com)

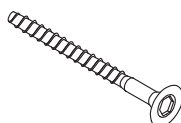A x8  7x80mm	B x16  8x30mm	C x8 	D x1 	E x2  8x50mm
F x1 	G x2  4x12mm	H x1 	I x1  4x40mm	 wood glue ( not included, but recommend)

### STEP 1

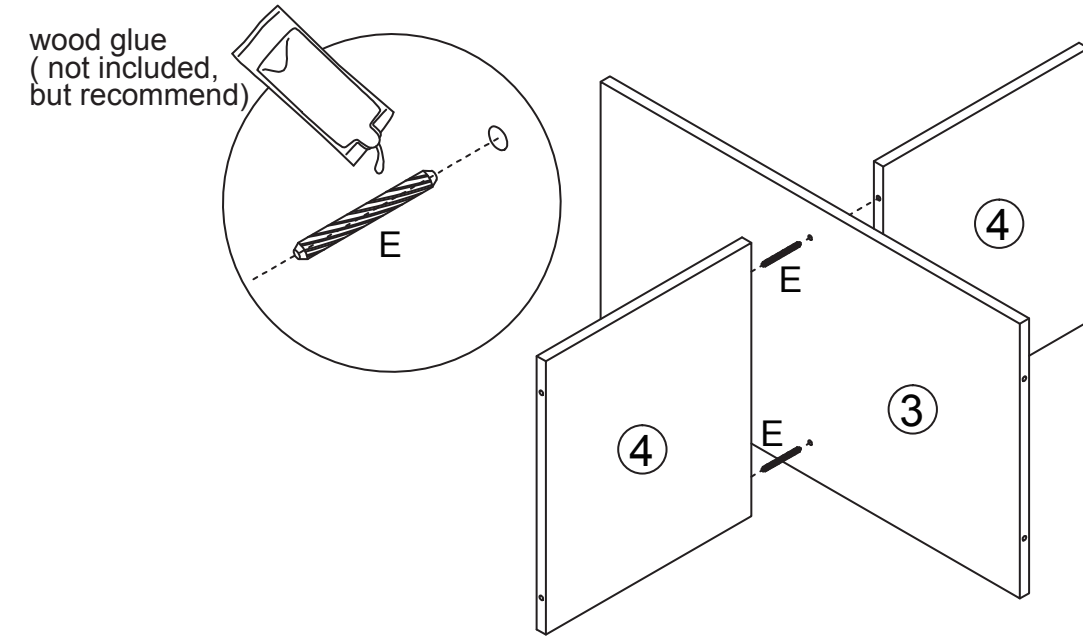

### STEP 2

