

Assembly Instructions


Assembling a Single elfa Frame

Tools needed: plastic mallet

TIPS for getting started

- If you don't have a plastic mallet, you can use a hammer with a wood block to protect the frame.

If assembling on tile or wood, you must protect the floor.

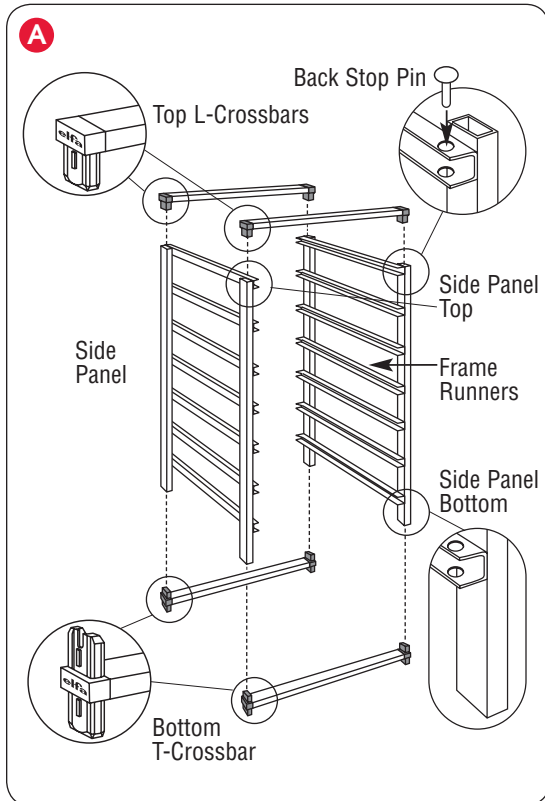

- STEP 1 Position the side panels, runners facing inward. (Figure A)
- STEP 2 Using a plastic mallet, tap the bottom T-crossbars into the bottom of each side panel.
- STEP 3 Put a back stop pin in the back holes of the top runners before inserting the top L-crossbars. The remaining back stop pins should be put in just prior to sliding in the drawers.

If combining Frames, see instructions below.

- STEP 4 **If using a melamine top**, tap the top L-crossbars completely into each side panel. Place adhesive strips included in the packaging on the top L-crossbars. Align the melamine top with the crossbars and press firmly.


If not using a melamine top, tap the top L-crossbars completely into each side panel.

Combining elfa Frames

- STEP 1 Assemble the top frame completely. (See Steps 1 & 2 above.)
- STEP 2 Assemble the bottom frame, omitting the top L-crossbars.
- STEP 3 If using back stop pins, put one in the back of the left and right top runners of the bottom frame.
- STEP 4 Lower the top frame onto the bottom frame, making sure the back stop pins are all on the back side. Secure by firmly tapping each corner of the top frame until bottom T-crossbars are completely inserted into the bottom frame. (Figure B)

Inserting Drawers

- STEP 1 Insert remaining back stop pins.
- STEP 2 Slide in Drawers.
- STEP 3 If you have other elfa Frame and Drawer accessories, add them now.

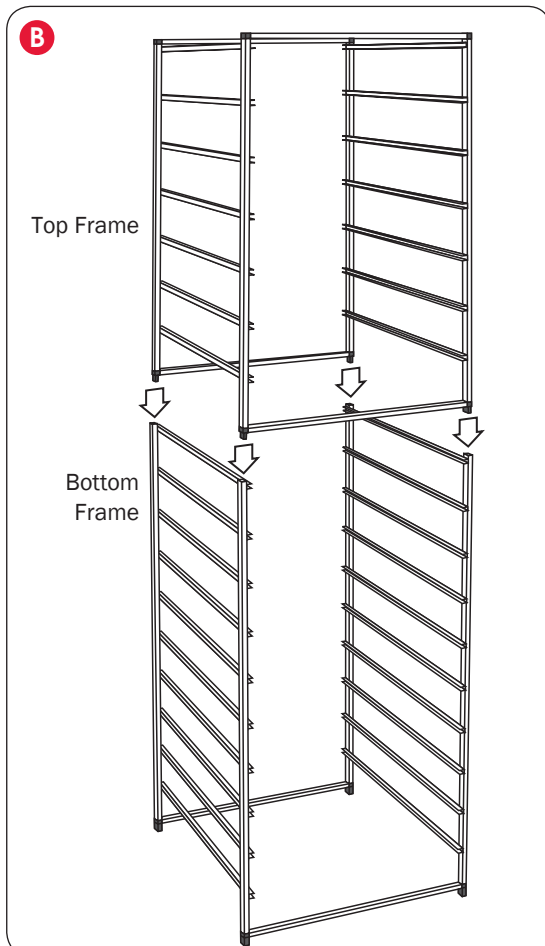

You'll find step-by-step instructions for installing and assembling your customized elfa solution at containerstore.com/installation, including in-depth video instructions!