



elfa® CLASSIC 4' Closet Kit Assembly Instructions

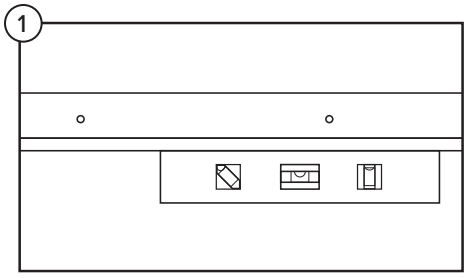



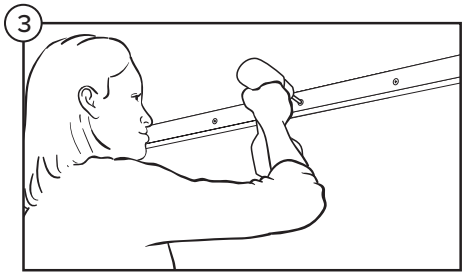

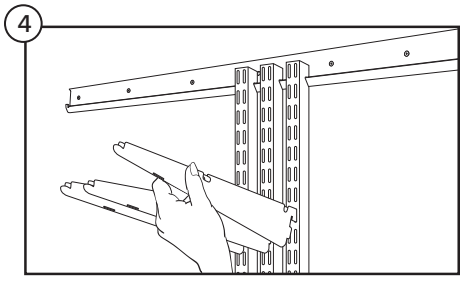

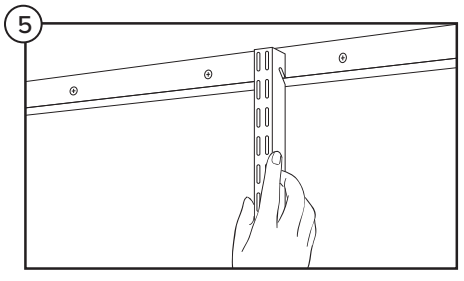

Tools needed: drill, screwdriver, level and pencil

Install The Top Track

1 Position the Track where you want to mount it, use a level to ensure it is straight. Using a pencil, mark each hole location. Be sure to keep Track level.

TIP

For longer Tracks, drill the center hole and secure with one screw. Tighten the screw just enough to hold the Track against the wall. Level the Track and mark the rest of the holes.

2 Set Track aside and drill a 1/8" hole at each location. If you hit wood, continue drilling the entire length of the drill bit. In most applications, you will not hit wood for every hole. If you don't hit a stud, mark the location. At the marked locations, enlarge that hole with the appropriate drill bit size for the hardware needed for your wall construction.

3 Place the Track on the wall, insert and tighten all the screws using a power drill with a #2 Phillips head bit. To avoid stripping the screws, finish hand tightening with a #2 Phillips head screwdriver.


Install The Hanging Standards and Shelf Brackets


4 Hang Standard on Track. Group Hanging Standards together and insert Brackets at the appropriate height for desired shelf placement.


5 Slide the Hanging Standards to the approximate position on the Top Track. Hanging Standards should be a minimum of ½" from the ends of the Top Track.


ONLY AT The Container Store®


elfa CLASSIC 4' Closet Kit Assembly Instructions

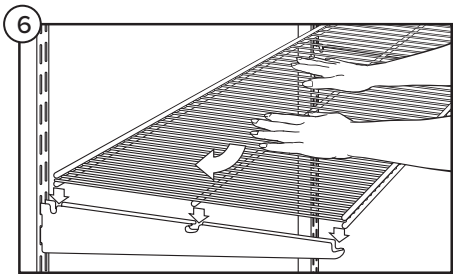


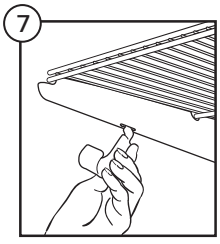

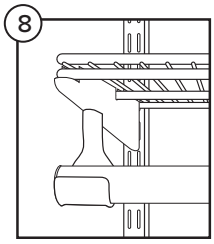

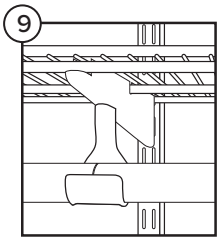

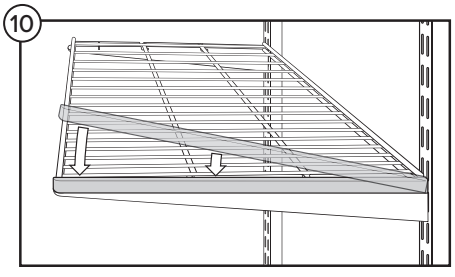

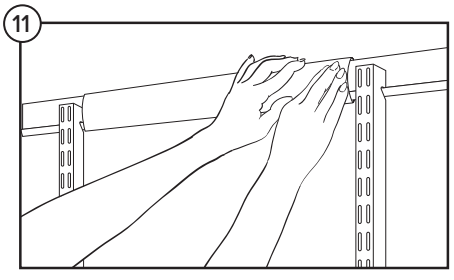

TIP

Ventilated Shelves have a top and a bottom. The middle support wire is connected to the bottom of the Shelf.

Install Ventilated Shelves

6 Place the Shelf wires over the Shelf Bracket notches. Install the Shelf with end wires inside the Brackets. Lock the Shelf into place by pressing down on the middle of the Shelf and pushing toward the wall. NOTE: If installing two Ventilated Shelves side-by-side to create one 4' Shelf, the two Shelves will share the middle Shelf Bracket.

Install Closet Rods

7 Insert the Closet Rod Holder into the slot in the bottom of the Ventilated Shelf Bracket.

8 Tap the End Caps into both ends of the Closet Rod. Snap the Closet Rod into the Closet Rod Holder.

9 If installing Closet Rods that share a Closet Rod Holder, only tap End Caps into the non-joined ends of each Closet Rod.

Install the Bracket Covers

10 Left and Right Bracket Covers are not interchangeable. Place the outer edge of the Bracket Cover over the outer edge of the Ventilated Shelf Bracket. Push down from the back to the front to snap the Bracket Cover in place.

Install Top Track Cover

TIP

Install your Top Track Cover ONLY after you have placed all of your components and are satisfied with positioning of your Elfa Shelving.

11 Start with the long pieces first. Cut Top Track Cover to size using scissors. Place top of Top Track Cover on top of the Top Track. Push the bottom part of the Top Track Cover over the bottom of the Top Track. You may need a bit of force to secure the Top Track Cover.

For assembly videos, visit containerstore.com/elfa/installation

ONLY AT The Container Store®

©2021 The Container Store Inc. All rights reserved. 51322 9/21